
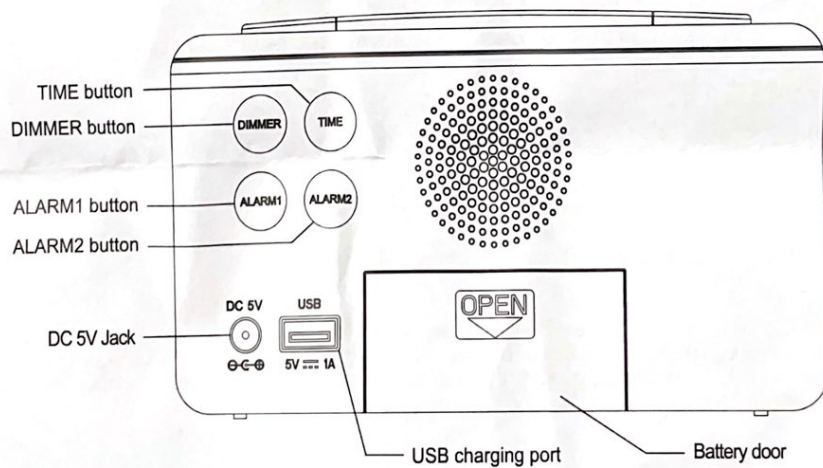
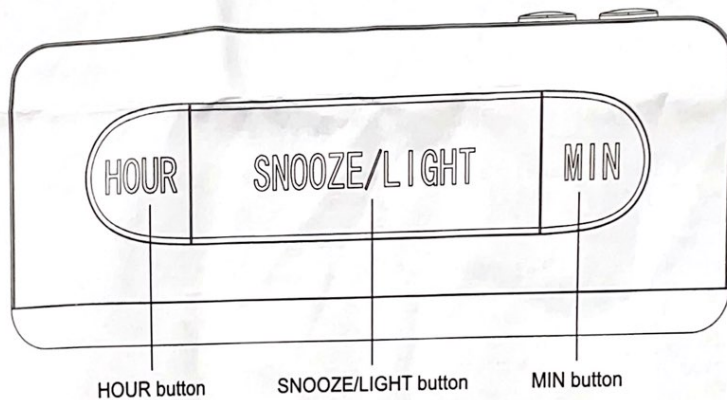


LED Alarm Clock with USB Port Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES:

- Large 1.4" LED Display
- DUAL Alarm
- 6 levels Alarm Volume
- Display Dimmer control (100%/50%/20%)
- 9 Minute Snooze
- Night Light
- USB charging port
- Battery Back up (Battery Not Included)

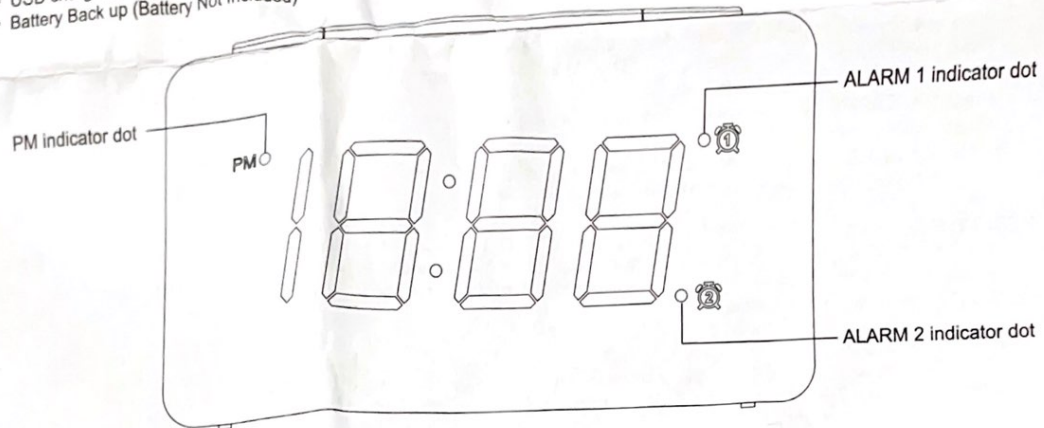

POWER SUPPLY

- Plug the USB-A end of cable into the power adapter and the other end of cord into the DC 5V Jack on the back of the unit.

SETTING THE TIME

- Press and hold the TIME button for 2 seconds to activate time setting. HOUR and MINUTES will flash.
- Press the HOUR button to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Press the MIN button to the correct minute.
- Press the TIME button to confirm and save time setting.

Display will now stop flashing.

NOTE: The default time is 12:00. If the setting do not require change wait 10 seconds after desired setting change has been made and the clock will automatically save and exit setup.

SETTING THE ALARM 1

- Press and hold the ALARM 1 button for 2 seconds to activate alarm1 time setting. HOUR and MINUTES will flash.
- Press the HOUR button to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Press the MIN button to the correct minute.
- Press the ALARM 1 button to confirm and save time setting, and return to the clock display.

Display will now stop flashing.

NOTE: The default alarm1 time is 7:00. If the setting do not require change wait 10 seconds after desired setting change has been made and the clock will automatically save and exit setup.

SETTING THE ALARM 2

- Press and hold the ALARM 2 button for 2 seconds to activate alarm2 time setting. HOUR and MINUTES will flash.
- Press the HOUR button to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Press the MIN button to the correct minute.
- Press the ALARM 2 button to confirm and save time setting, and return to the clock display.

Display will now stop flashing.

NOTE: The default alarm2 time is 8:00. If the setting do not require change wait 10 seconds after desired setting change has been made and the clock will automatically save and exit setup.

USING THE ALARM 1

- Press the ALARM 1 button, the ALARM 1 indicator dot will be lit and the alarm will sound at the preset time.
- Press the ALARM 1 button again, the ALARM 1 Indicator dot will no longer be visible.

NOTE: The default is ON setting.

USING THE ALARM 2

- Press the ALARM 2 button, the ALARM 2 indicator dot will be lit and the alarm will sound at the preset time.
- Press the ALARM 2 button again, the ALARM 2 Indicator dot will no longer be visible.

NOTE: The default is ON setting.

USING THE SNOOZE

- Press the ALARM 1 button or ALARM 2 button to switch ON/OFF the alarm. The ALARM 1 or ALARM 2 indicator dot will be lit when it is ON.
- When the preset time is reached the alarm will sound for 5 minutes unless one of the following two actions is taken:
 - 1) Press the ALARM 1 button or ALARM 2 button which will cause the alarm to stop, but the alarm will remain set for the same time the following day.
 - 2) Press the SNOOZE/LIGHT button will cause the alarm to stop and the alarm will sound again in 9 minutes. This will happen each time the SNOOZE/LIGHT button is pressed.

USING THE DISPLAY DIMMER

- While the alarm is not sounding, press the DIMMER button to select between 3 levels of brightness.

NOTE: The default is HIGH setting.

USING THE NIGHTLIGHT

- While the alarm is not sounding, press the SNOOZE/LIGHT button to turn on the nightlight.
- Press the SNOOZE/LIGHT button again, the nightlight will be turned off.

NOTE: The default is OFF setting.

USING THE ALARM VOLUME

- Press HOUR button or MIN button to select 6 levels of volume. After the display screen displays the volume level for 3 seconds will automatically return to the clock to display.

NOTE: The default is maximum setting.

USB CHARGING FUNCTION

- Conveniently charge your Smartphone.
- To charge, connect your USB device to the USB port of this alarm.
- Use only with devices that require 5V USB power. USB port provides 1000mA recharging current.
- Devices requiring more than 1000mA should not be used. Charging time may vary for different devices.

NOTE: Charging function may not be supported for all phones or electronic devices.

BATTERY BACK UP

- Remove the BATTERY DOOR and insert 2 new "AAA" batteries (not included) in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly. The battery will hold the ALARM and TIME settings if the power is interrupted. There will be no display under battery power and the ALARM will sound at the correct time. If there is no battery and the power is interrupted, the display will 12:00 and the ALARM 1/ALARM 2/ TIME will need to be reset.

CARE OF YOUR CLOCK

- Replace the back up battery annually, or store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Model : ZH101
Printed in China