

Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.




FEATURES :

- 12/24 hour system selected
- Dual Alarm
- LCD display with AM and PM indicator
- The display shows TIME, ALARM1 & ALARM2
- Four steps ascending alarm sound or record sound
- Alarm and 5 minutes snooze
- Soft yellow display backlight for night viewing (on demand)
- Requires 2 x AAA batteries (not supplied)


TO LOCK YOUR SETTINGS

- After you have set your clock to all the desired time, sleep, alarm1 and alarm2 settings, you can lock the buttons so no adjustments can be made.
 - To lock the clock buttons, press and hold the UP button for 3 seconds. A Lock indicator will appear on your display.
 - To unlock the clock buttons to make changes to any of your settings, press and hold the DOWN button for 3 seconds. The LOCK indicator will disappear on your display.
- NOTE:** Locking your clock's buttons will not turn off the ability to use the backlight and play record sound.

Record2 indicator
Record1 indicator
Beep indicator
AM indicator
PM indicator
Lock indicator
MIC indicator
Snooze indicator
Alarm1 indicator
Alarm1 time display
Alarm2 indicator
Alarm2 time display

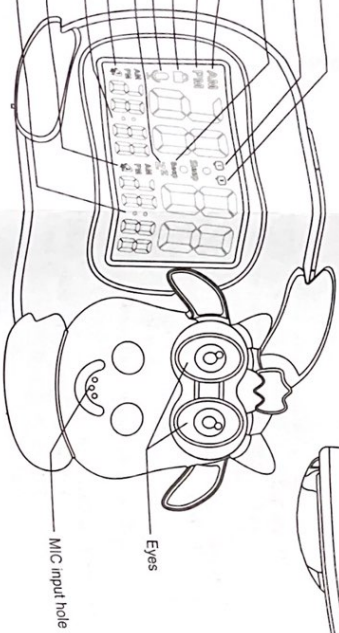

RECORD1 button

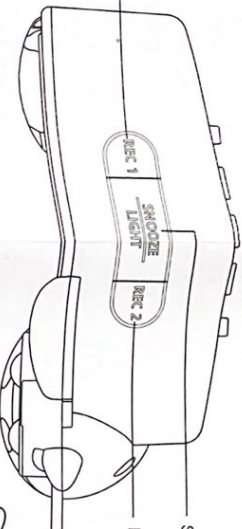

SNOOZE/LIGHT button

RECORD2 button

ALARM2 Switch


ALARM1 button

SLEEP button

DOWN button

DC 5V Jack

Battery door

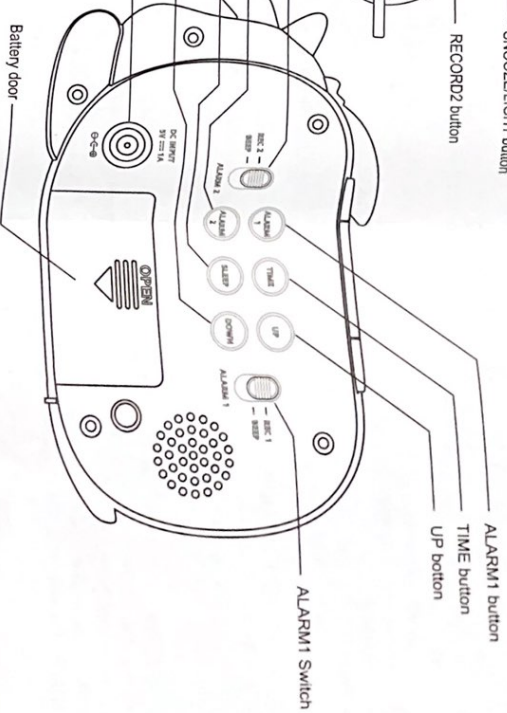

POWER SUPPLY

- Insert the AC adaptor into a 120V AC 60Hz mains outlet and the other end of cord into the DC 5V Jack on the back of the unit.

TIME SETUP

- Press and hold the TIME button for 2 seconds to activate time setting, hour will flash.
 - Press UP or DOWN buttons to the correct HOUR, the PM indicator will light when the HOUR is advanced into PM time.
 - Press the TIME button to confirm HOUR, MINUTES will begin to flash.
 - Press UP or DOWN buttons to the correct MINUTE.
 - Press the TIME button to confirm and save time setting.
- Display will stop flashing.

DUAL ALARM SETUP

- Press and hold the ALARM1 or 2 button for 2 seconds to activate ALARM1 or 2 setting, hour will flash.
 - Press the UP or DOWN buttons to the correct HOUR, the PM indicator will light when the HOUR is advanced into PM time.
 - Press the ALARM1 or 2 button to confirm HOUR, MINUTES will begin to flash.
 - Press the UP or DOWN buttons to the correct MINUTE.
 - Press the ALARM1 or 2 button to confirm and save alarm time setting.
- Display will stop flashing.

NOTE: The alarm1 and 2 time display default is OFF setting.

USING THE DUAL ALARM

- Press the ALARM1 or 2 button to activate ALARM 1 or 2 and the "1" or "2" indicator will appear.
- Press the ALARM1 or 2 button again to deactivate ALARM 1 or 2 and the "1" or "2" indicator will disappear.
- The ALARM1 or 2 will sound for 3 minutes at the programmed time.

NOTE: The default is OFF setting.

VOICE RECORDER AND PLAY VOICE RECORDING

- Press and hold REC 1 or 2 button, you heard a "DI" and then MIC indicator will flash.
 - Keep pressing REC1 or 2 button and start record the voice message.
 - Release the REC1 or 2 button to end the message record and will saved automatically after you heard "DI DI".
- MIC indicator will disappear.
- The maximum recording time is 15 seconds
 - The recorded voice message also can be set to be the alarm sound.
 - Press REC1 or 2 button to playback the last message you recorded at any time.
- NOTE:** The default is no voice record. Voice recording function is NOT available during alarm mode.

CHOOSING YOUR WAKEUP SOUND

- Slide the ALARM 1 or ALARM 2 Switch to the BEEP position, the Beep indicator will be lit.
- When the recording ends, Slide the ALARM 1 or ALARM 2 Switch to the REC1 or REC2 position, the Record1 or 2 indicator will be lit.

TO SET THE TIME IT IS OK TO GET OUT OF BED

- Press the ALARM1 or 2 button to turn on the ok to wake setting. You will see a Alarm1 or 2 indicator appear on the display to show it has been set.
- When the time you have set that is ok to get out of bed has been reached, the eyes will open and alarm sound.

NOTE: The default is closed eyes setting.

TO SET THE TIME YOU WANT TO GO TO SLEEP

- Press and hold the SLEEP button for 2 seconds to activate sleep time setting, hour will flash.
- Press UP or DOWN buttons to the correct HOUR, the PM indicator will light when the HOUR is advanced into PM time.
- Press UP or DOWN buttons to the correct HOUR, MINUTES will begin to flash.
- Press the SLEEP button to confirm and save sleep time setting.
- Display will stop flashing.
- When bedtime has been reached, the eyes will close.

NOTE: The default is closed eyes setting.

USING THE SNOOZE

- Press the SNOOZE/LIGHT button after the wake-up alarm sounds will cause the alarm to stop and the alarm will sound again in 5 minutes. This will repeat each time the SNOOZE/LIGHT button is pressed. The snooze indicator "ZZ" will be flash to confirm snooze function is activated.

USING THE BACKLIGHT

- While the alarm is not sounding, press and hold the SNOOZE/LIGHT button for 2 seconds to illuminate the display backlight for your night viewing.
- While the backlight is off, press the SNOOZE/LIGHT button to illuminate the display backlight 5 seconds for your night viewing.

NOTE: The default is off setting.

12 OR 24-HOUR DISPLAY

- In time mode, press the TIME button to select 12 or 24-HOUR TIME mode.

NOTE: The default is the 12-hour display mode.

BATTERY BACKUP

- Remove the Battery door and insert 2 new "AAA" batteries (not included) in the direction of the polarity symbols.
- Please make sure the batteries are new and inserted correctly (alkaline batteries recommended).
- The battery will hold the ALARM1 / ALARM2 / Recording and TIME settings if the power is interrupted. If there is no battery and the power is interrupted, the display 12:00 and the ALARM1 / ALARM2 / Recording / TIME will need to be reset.

BATTERY WARNING

- Please avoid exposing your clock to direct sunlight.
- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) and (-) to place battery.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon - Zinc), or Rechargeable (Nickel - Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Do not dispose of batteries in fire. Batteries may explode or leak.

CARE OF YOUR CLOCK

- A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Model : ZH050A
Printed in China