

 
 
 
# Zeit Halter

## LED Alarm Clock with USB Ports Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

### FEATURES:

- 1.8" LED Display
- Beep Alarm
- Display Dimmer control (10%/60%/100%)
- 10 steps Alarm Volume control
- 9 Minute Snooze
- 2 X 1AMP USB Charging Ports
- AC adaptor Output 5V/4A (Included)
- Battery Back up (Battery Not Included)

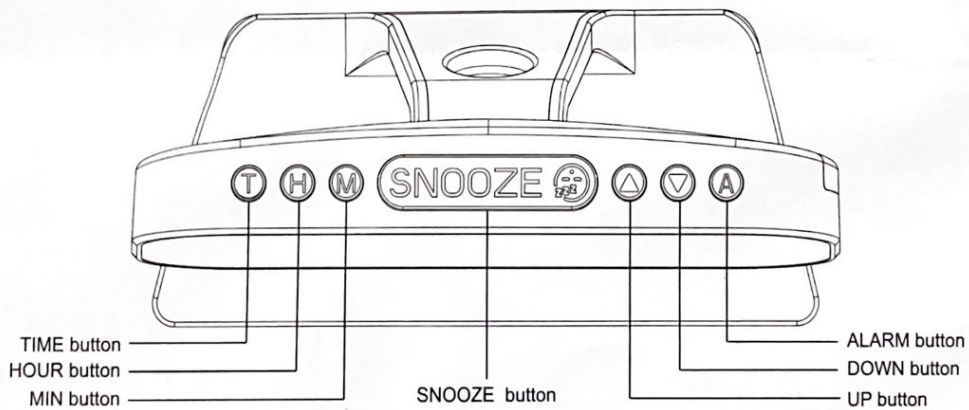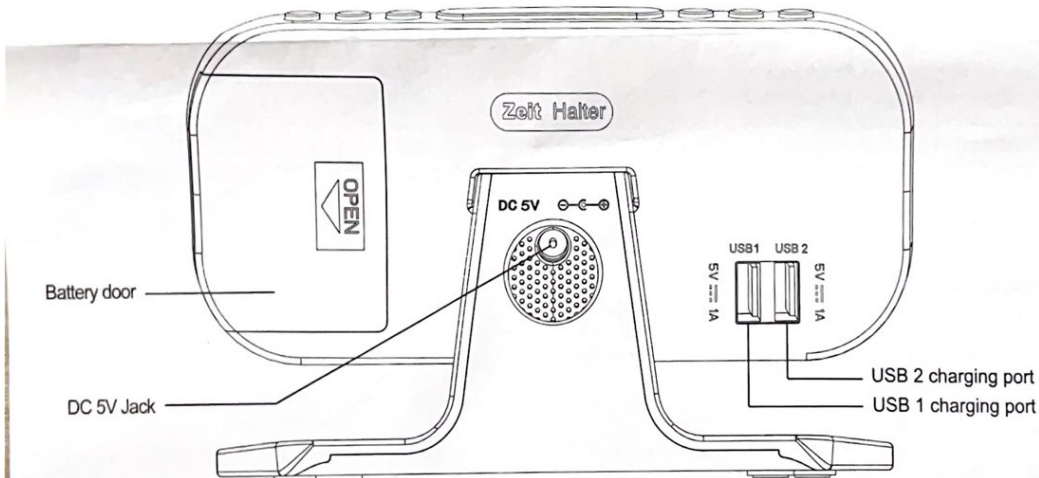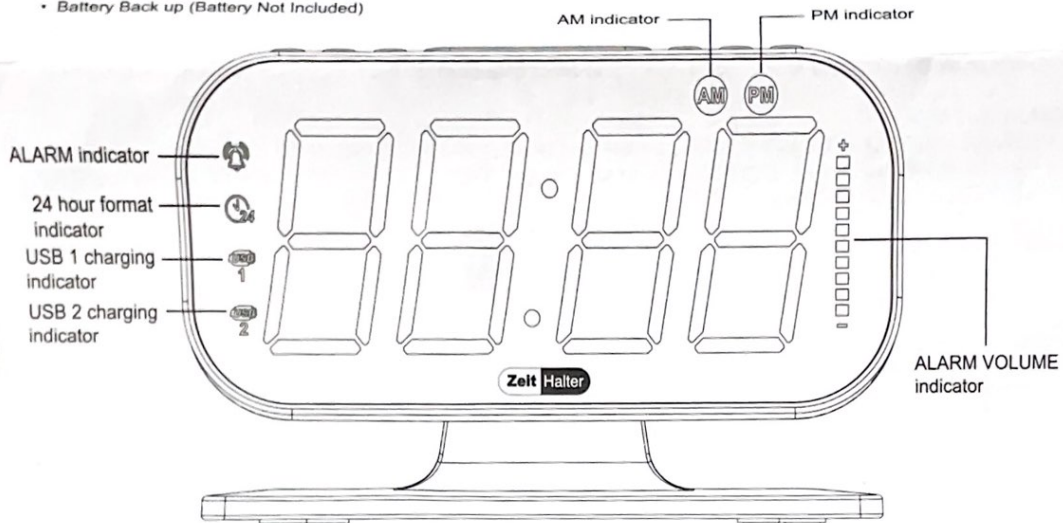

#### POWER SUPPLY

- Insert AC adaptor into a 100 – 240AC – 50/60Hz mains outlet and the other end of cord into the DC 5V Jack on the back of the unit.

#### SETTING THE TIME

- Press and hold the TIME button down, the LED display flashes to set time.
- While holding down the TIME button, press the HOUR button to advance to the correct hour.  
The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MIN button to advance to the correct minute.
- Release the TIME button when the correct time is shown on the display, display will now stop flashing.
- When setting the time, be sure you are in the correct AM or PM time as indicated by the AM or PM indicator on the display.

NOTE: In time mode, press TIME button to select 12 or 24 hour format, The 24-hour indicator will be lit when the 24 hour format is selected. The default is 12-HOUR Format.

#### SETTING THE ALARM

- Press and hold the ALARM button down, the LED display flashes to set alarm time.
- While holding down the ALARM button, press the HOUR button to advance to the correct hour.  
The PM Indicator will light when the hour is advanced into the PM time.
- While holding down the ALARM button, press the MIN button to advance to the correct minute.
- Release the ALARM button when the correct alarm time is shown on the display, display will now stop flashing.
- When setting the alarm time, be sure you are in the correct AM or PM time as indicated by the AM or PM indicator on the display.

#### USING THE ALARM

- Press the ALARM button, the ALARM indicator will be lit and the alarm will sound at the preset time.
- Press the ALARM button again, the ALARM Indicator will no longer be visible.

NOTE: The default is OFF setting.

#### USING THE ALARM VOLUME

- In time mode, You can use the "UP" or "DOWN" buttons to adjust beep volume.

NOTE: You last adjust beep volume. will be used if alarm to wake to sound.

#### USING THE SNOOZE

- When the preset time is reached the alarm will sound for 5 minutes unless one of the following two actions is taken:
  - 1) Press any button to stop the alarm, but the alarm will remain set for the same time the following day.
  - 2) Press the SNOOZE button will cause the alarm to stop and the alarm will sound again in 9 minutes.  
This will happen each time the SNOOZE button is pressed.
  - 3) When entering snooze state, press the ALARM button to exit snooze function.

#### USING THE DIMMER

- While the alarm is not sounding, press the SNOOZE button to change the HIGH / MIDDLE or LOW setting to control the brightness of the clock display.

NOTE: The default is HIGH setting.

#### USB CHARGING FUNCTION

- Conveniently charge your Smartphone.
- For charge, connect your USB device to the USB port of this clock.
- Use only with devices that require 5V USB power. USB port provides 1000mA recharging current.
- Devices requiring more than 1000mA should not be used. Charging time may vary for different devices.
- When the USB 1 charging port is inserted for charging, the USB 1 charging indicator will be lit and flashes.
- When the USB 2 charging port is inserted for charging, the USB 2 charging indicator will be lit and flashes.

NOTE: Charging function may not be supported for all phones or electronic devices. When both of the USB ports are being used, both can provide 1000mA output. The USB power will raise up to 2000mA if only one USB is connected.

#### BATTERY BACK UP

- Remove the BATTERY DOOR and insert 2 new "AAA" batteries (not included) in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly. The battery will hold the ALARM and TIME settings if the power is interrupted. There will be no display under battery power and the ALARM will sound at the correct time. If there is no battery and the power is interrupted, the display will 12:00 and the ALARM / TIME will need to be reset.

#### CARE OF YOUR CLOCK

- A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

Model : KT280  
Printed in China