



Senicare

LED Alarm Clock Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES:

- 3" LED Display
- Dual Alarm
- Display Dimmer control (10%/60%/100%)
- Nightlight
- 9 Minute Snooze
- AC adaptor Output 5V/2A (Included)
- Battery Back up (Battery Not Included)

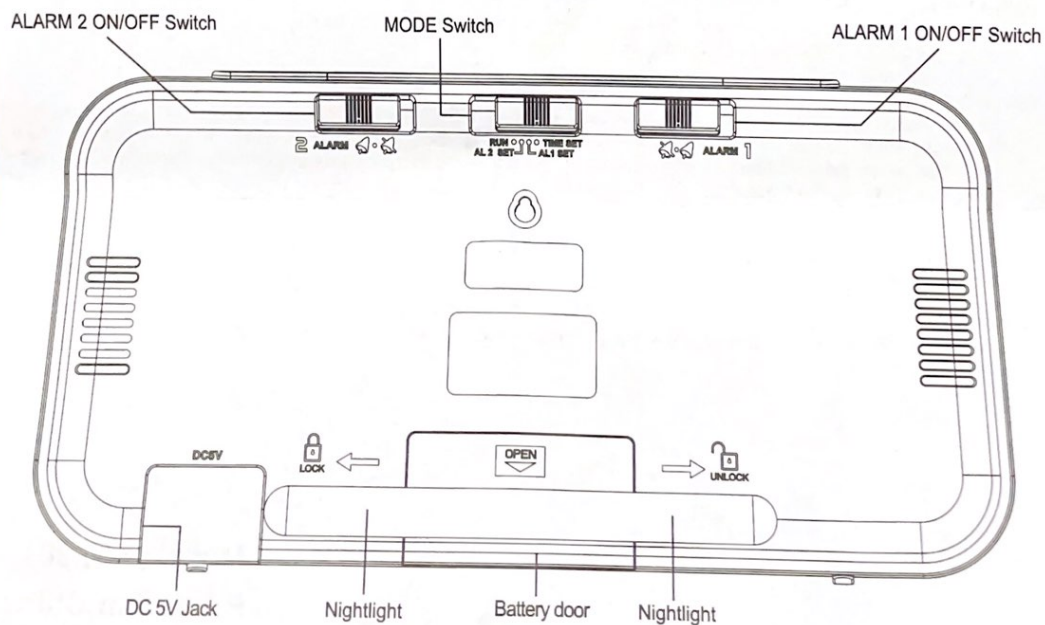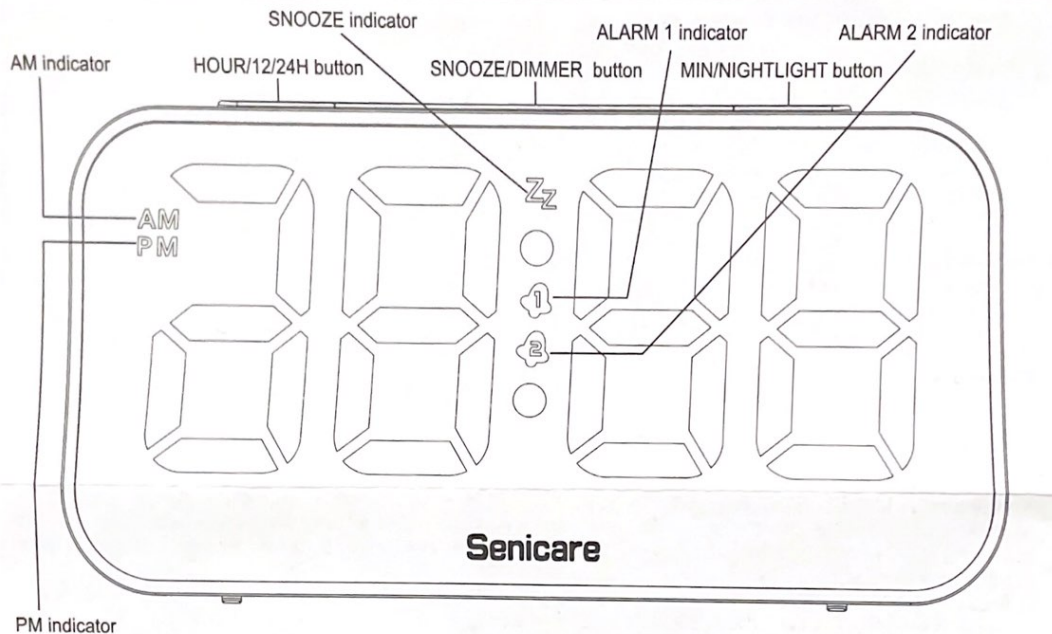

POWER SUPPLY

- Insert AC adaptor into a 100 – 240AC ~ 50/60Hz mains outlet and the other end of cord into the DC 5V Jack on the back of the unit.

SETTING THE TIME

- Slide the MODE switch to the TIME SET position, the LED display flashes to set time.
 - While the slide switch is on the TIME SET position, press the HOUR/12/24H button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
 - While the slide switch is on the TIME SET position, press the MIN/NIGHTLIGHT button to advance to the correct minute.
 - Slide the MODE switch to the RUN position when the correct time is shown on the display, display will now stop flashing.
 - When setting the time, be sure you are in the correct AM or PM time as indicated by the AM or PM indicator on the display.
- NOTE: In time mode, press HOUR/12/24H button to select 12 or 24 hour format. The default is 12-HOUR Format.

SETTING THE ALARM 1

- Slide the MODE switch to the AL1 SET position, the LED display flashes to set ALARM 1 time and indicator.
- While the slide switch is on the AL1 SET position, press the HOUR/12/24H button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While the slide switch is on the AL1 SET position, press the MIN/NIGHTLIGHT button to advance to the correct minute.
- Slide the MODE switch to the RUN position when the correct time is shown on the display, display will now stop flashing.
- When setting the alarm 1 time, be sure you are in the correct AM or PM time as indicated by the AM or PM indicator on the display.

SETTING THE ALARM 2

- Slide the MODE switch to the AL2 SET position, the LED display flashes to set ALARM 2 time and indicator.
- While the slide switch is on the AL2 SET position, press the HOUR/12/24H button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While the slide switch is on the AL2 SET position, press the MIN/NIGHTLIGHT button to advance to the correct minute.
- Slide the MODE switch to the RUN position when the correct time is shown on the display, display will now stop flashing.
- When setting the alarm 2 time, be sure you are in the correct AM or PM time as indicated by the AM or PM indicator on the display.

USING THE ALARM 1

- Slide the ALARM 1 ON/OFF switch to the ON position, On the front of the clock the Alarm Indicator dot will be lit and the alarm 1 will sound at the preset time.
- Slide the ALARM 1 ON/OFF switch to the OFF position to deactivate the alarm. The Alarm Indicator dot will no longer be visible.

USING THE ALARM 2

- Slide the ALARM 2 ON/OFF switch to the ON position, On the front of the clock the Alarm Indicator dot will be lit and the alarm 2 will sound at the preset time.
- Slide the ALARM 2 ON/OFF switch to the OFF position to deactivate the alarm. The Alarm Indicator dot will no longer be visible.

USING THE SNOOZE

- Slide the ALARM 1 or 2 ON/OFF switch to the ON position, The ALARM 1 or 2 indicator dot will be lit when it is ON.
- When the preset time is reached the alarm will sound for 8 minutes unless one of the following two actions is taken:
 - 1) Slide the ALARM 1 or 2 ON/OFF switch to the OFF position will cause the alarm to stop, but the alarm will remain set for the same time the following day.
 - 2) Press the SNOOZE/DIMMER button will cause the alarm to stop and the alarm will sound again in 9 minutes. This will happen each time the SNOOZE/DIMMER button is pressed.

USING THE DIMMER

- While the alarm is not sounding, press the SNOOZE/DIMMER button to change the HIGH / MIDDLE or LOW setting to control the brightness of the clock display.
- NOTE: The default is HIGH setting.

USING THE NIGHT LIGHT

- While the alarm is not sounding, Press the MIN/NIGHTLIGHT button to control the night light.
- NOTE: The default is OFF setting. The Nightlight can be removeable.

BATTERY BACK UP

- Remove the BATTERY DOOR and insert 2 new "AAA" batteries (not included) in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly. The battery will hold the ALARM and TIME settings if the power is interrupted. There will be no display under battery power and the ALARM will sound at the correct time. If there is no battery and the power is interrupted, the display will 12:00 and the ALARM / TIME will need to be reset.

CARE OF YOUR CLOCK

- A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

SUPPORT

- If you encounter any problems with this clock, please contact senicareshop@sina.com and we will deal with your issue within 24 hours.

Model : KT2901
Printed in China