



INSTRUCTIONS

Buttons Operation

	Long press power on/off Short press to open MIC
	Short press to mode switch Long press to two devices TWS
	Short press to open Accompaniment Long press open Magic mode
	Short press to music Play/Pause (Scan) Short press two to selfie
	Long press to Player volume+ Short press to music prev play (channel>)
	Long press to Player volume+ Short press to music next play(channel<)

Instructions and precautions

- Wireless connection pairing name MC871
- Automatic shutdown after 15 minutes in no working mode
- When the voice prompts that the battery is insufficient charge in time.
- Charging red light is on.
The red goes out when the battery is full.
unplug the charging cable in time.
- Kept away from fire .

Technical Parameters

- Output Power:5W
- Charging Power:DC5V
- Battery Capacity:1200mAH